


- Uprights x4
- Front to back battens x4
- Left to right battens x2
- Shelves x6
- Shelf clips x16
- Plastic feet x4

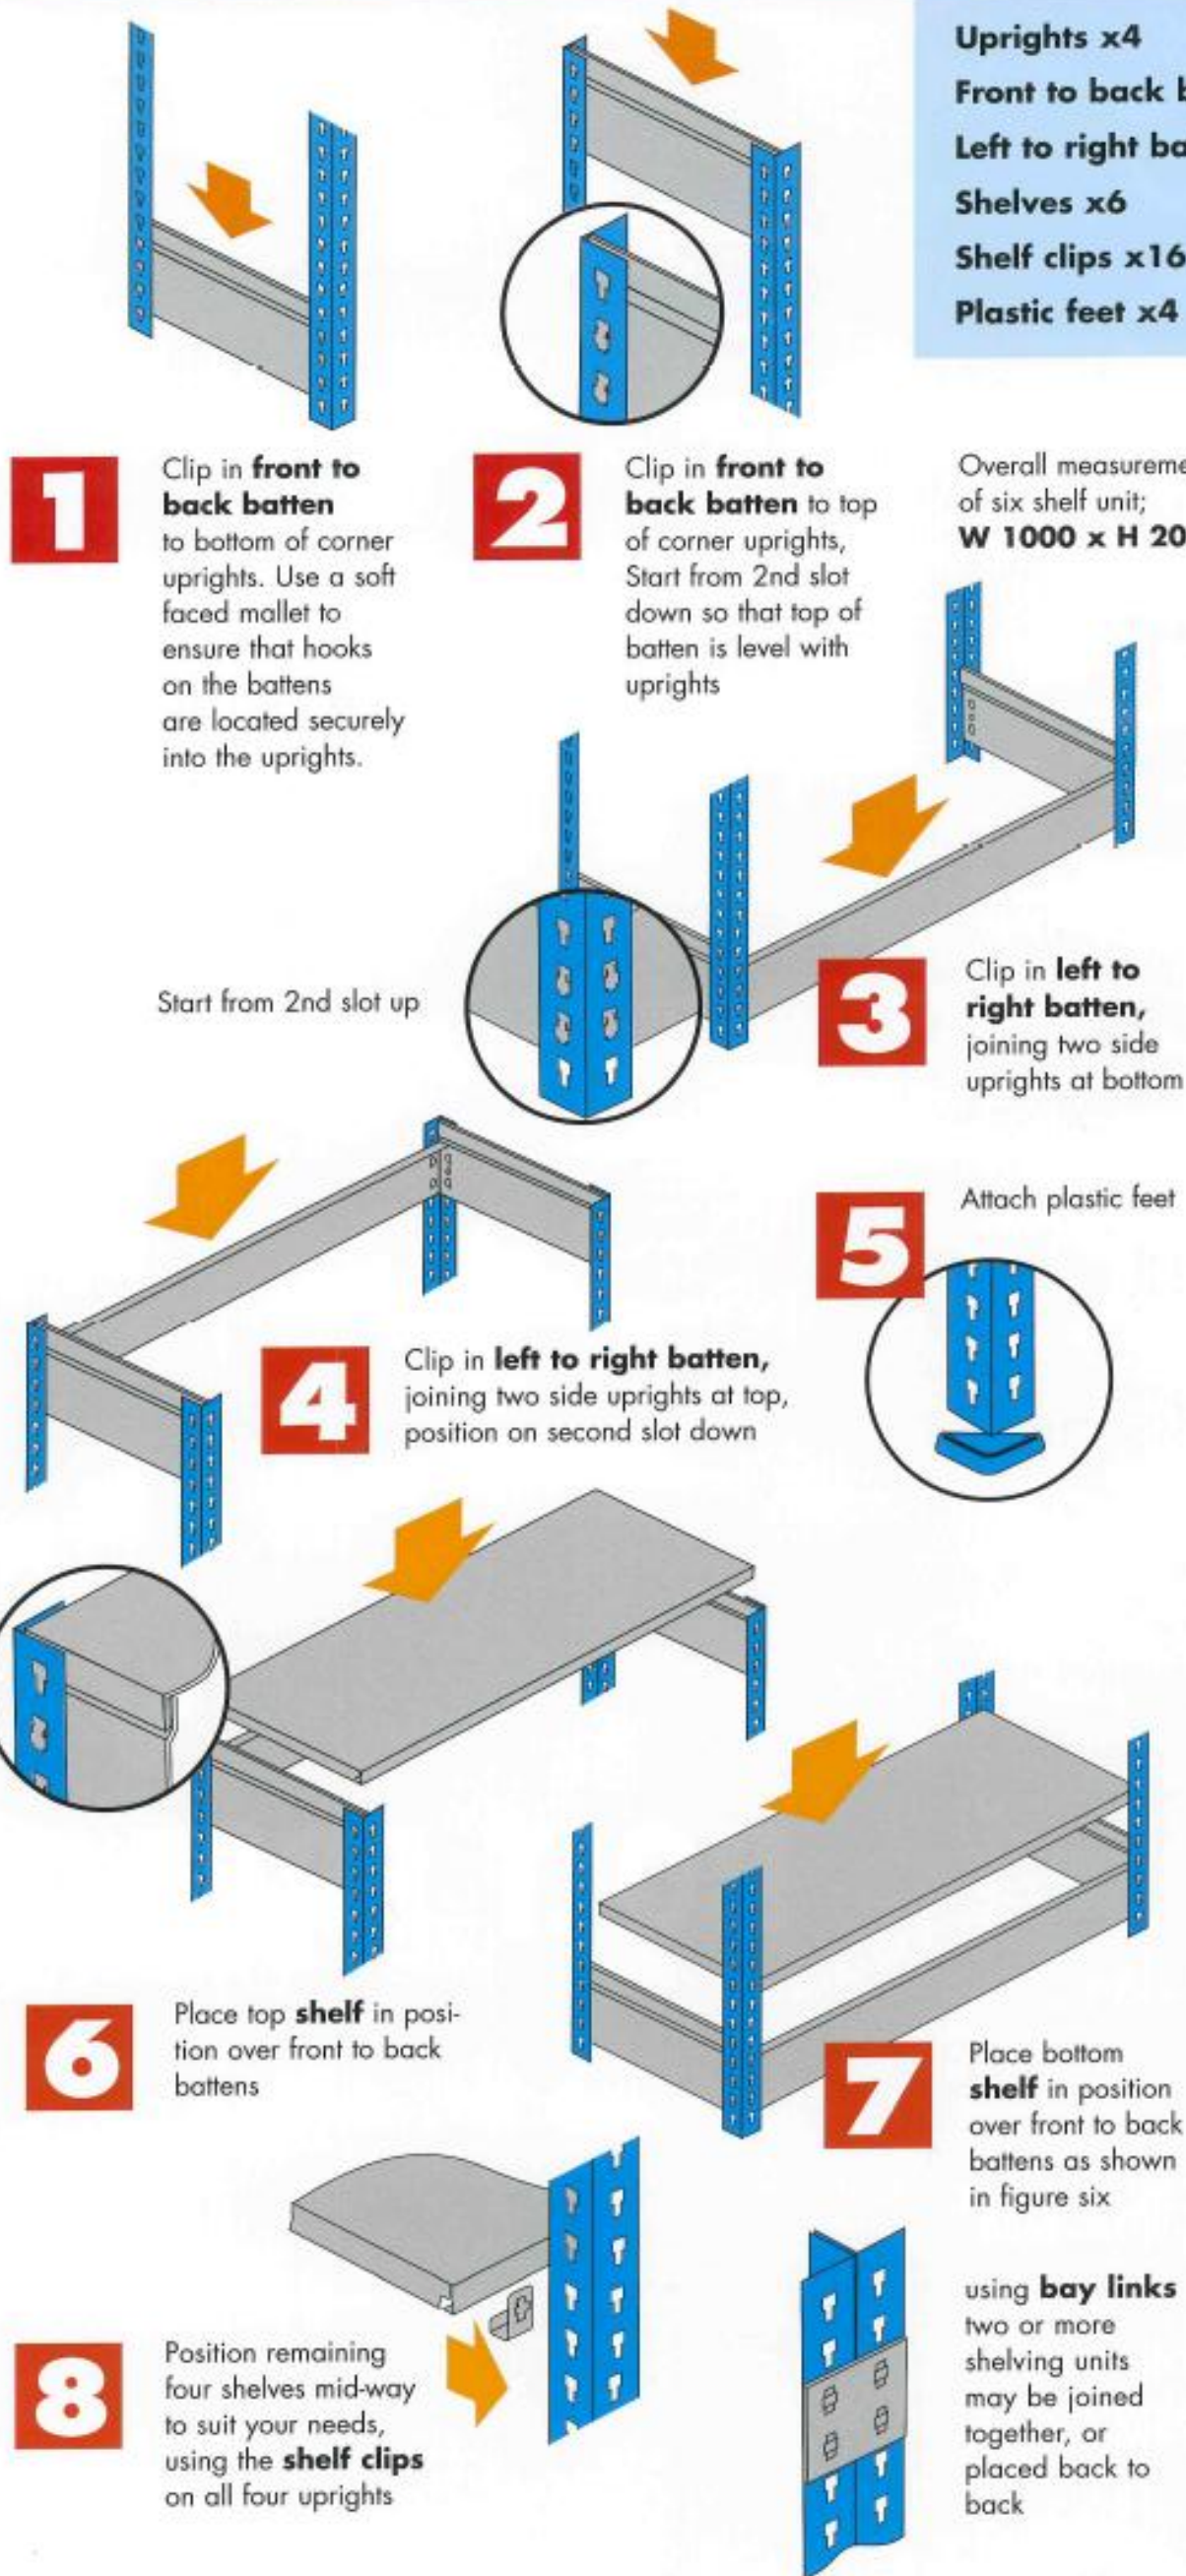

1 Clip in **front to back batten** to bottom of corner uprights. Use a soft faced mallet to ensure that hooks on the battens are located securely into the uprights.

2 Clip in **front to back batten** to top of corner uprights, Start from 2nd slot down so that top of batten is level with uprights

Overall measurement of six shelf unit;
W 1000 x H 2000 mm

Start from 2nd slot up

3 Clip in **left to right batten**, joining two side uprights at bottom

5 Attach plastic feet

4 Clip in **left to right batten**, joining two side uprights at top, position on second slot down

6 Place top **shelf** in position over front to back battens

7 Place bottom **shelf** in position over front to back battens as shown in figure six

8 Position remaining four shelves mid-way to suit your needs, using the **shelf clips** on all four uprights

using **bay links** two or more shelving units may be joined together, or placed back to back

When using 300 mm deep bays it is advisable to fix bay to a wall or other solid structure for extra stability.

Bay links, and extra shelves may be purchased separately if needed

SHELVING

SAFE SHELF LOAD UP TO 80KGS (176 LBS)
EVENLY DISTRIBUTED OVER SHELF AREA